

Kodak Paper Feed Roller - Replacement Instructions

This document provides instructions for installing the Paper Feed Roller in the *Kodak i55* and *i65* Scanners.

1. Open the ADF cover.




2. Lift the tabs and remove the paper feed roller cover.



3. Remove the paper feed roller.



4. Insert the new paper feed roller by aligning the tabs into the slots and pressing the roller into place.

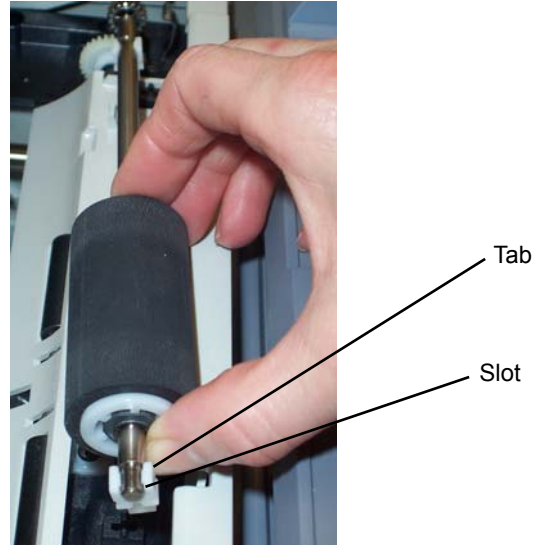

5. Reinsert the paper feed roller cover and snap it into place.
6. Close the ADF cover